












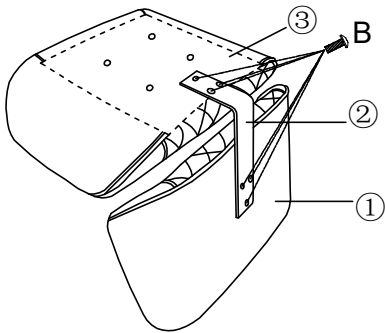





# Assembly Instruction

①*1pc		A*5+1EXT	 M6*30MM
②*1pc		B*6+1EXT	 M6*22MM
③*1pc		C*6+1EXT	 M6*20MM
④*1pc		D*2+1EXT	 M6*16MM
⑤*1pc		E*2	
⑥*1pc		G*1	 M6
⑦*1pc			


STEP1





STEP2

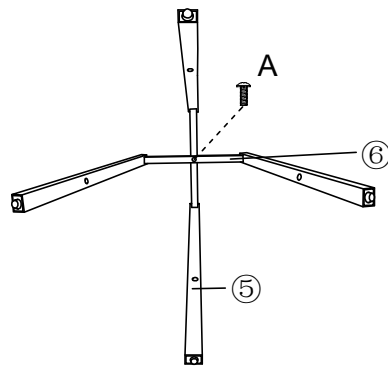



STEP3

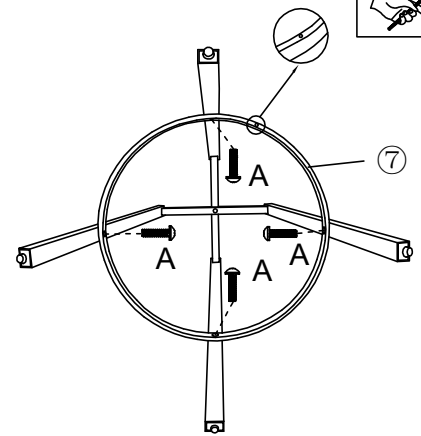


STEP4

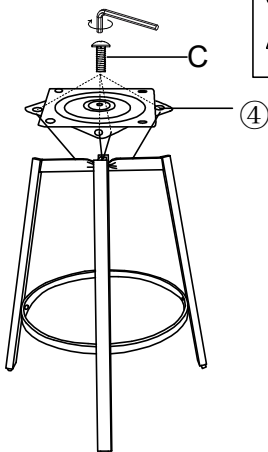

STEP5

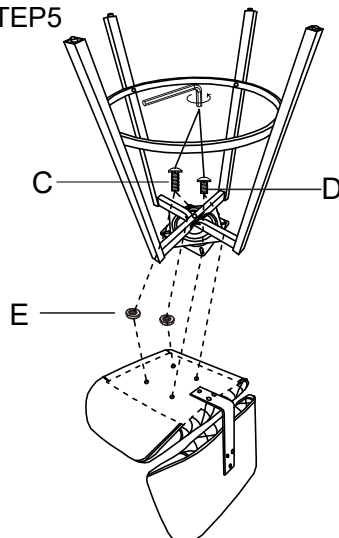

STEP6

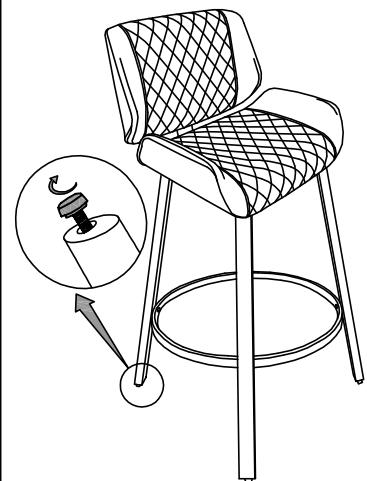

Fasten All screws indicate on Step 2 & Step3.