









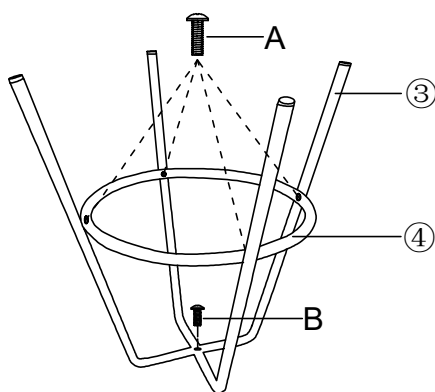




Assmebly Instruction

①*1pc		A*4+1EXT	 M6*30MM
②*1pc		B*3+1EXT	 M6*20MM
③*2pcs		C*6+1EXT	 M6*16MM
④*1pc		D*2	
		G*1	 M6

STEP 1





STEP 2

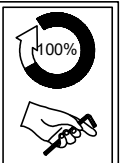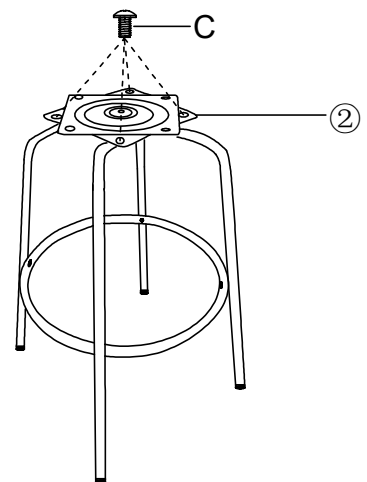

Fasten All screws indicate on Step 1.

STEP 3

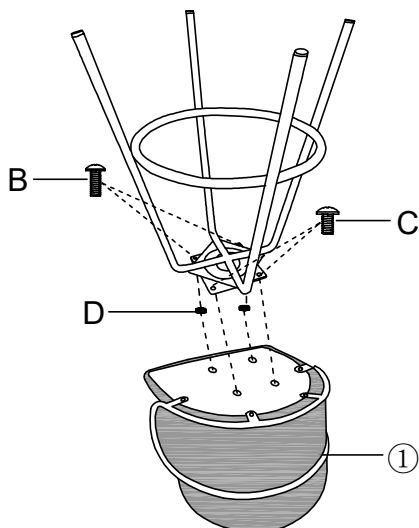

STEP 4

