










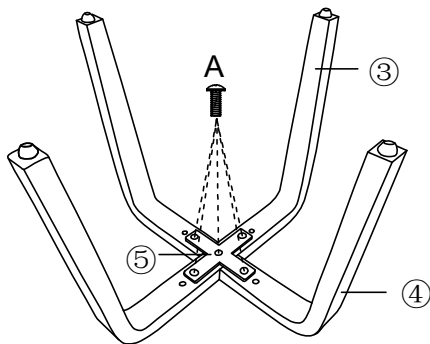




Assembly Instruction

①*1pc		A*9+1EXT	 M6*30MM
②*1pc		B*2+1EXT	 M6*20MM
③*1pc		C*2+1EXT	 M6*16MM
④*1pc		D*2	
⑤*1pc		G*1	 M6

STEP1





STEP2

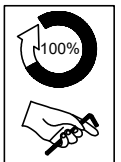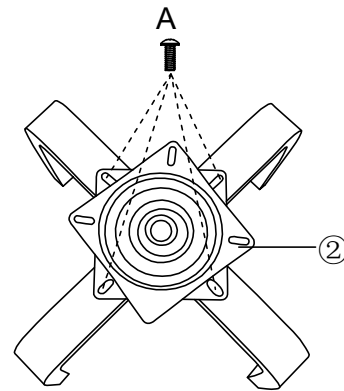

Fasten All screws indicate on & Step1.

STEP3

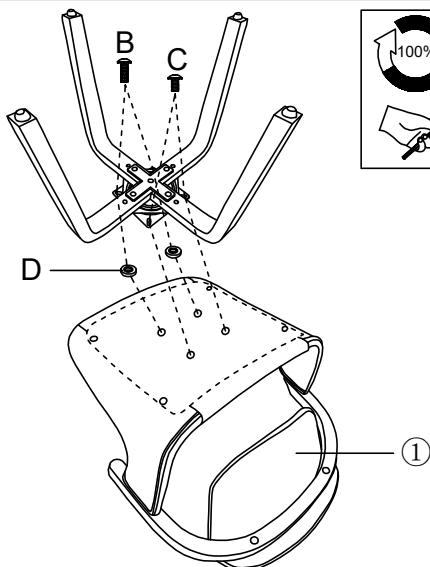

STEP4

