









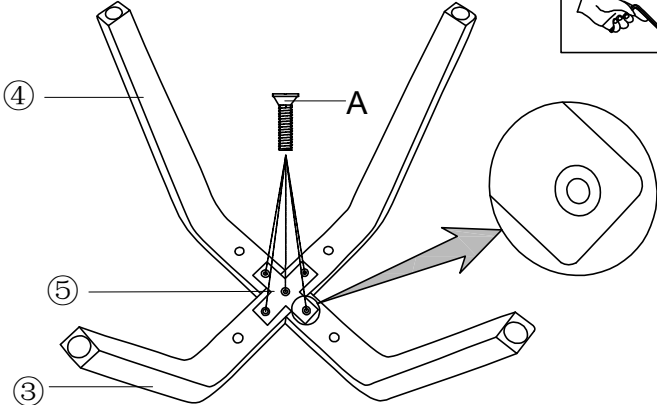





Assembly Instruction

①*1pc		A*5+1EXT	 M6*30MM
②*1pc		B*6+1EXT	 M6*20MM
③*1pc		C*2+1EXT	 M6*16MM
④*1pc		D*2	
⑤*1pc		G*1	 M4-M6

STEP1






STEP2

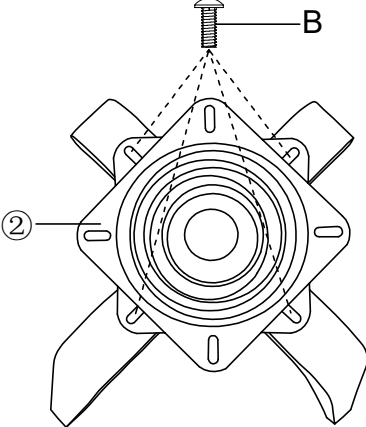Fasten All screws indicate on Step 1.

STEP3

STEP4

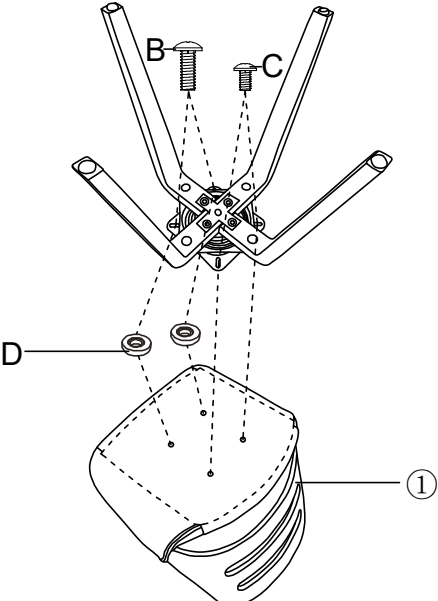